



**TWISTED
THROTTLE**.COM

Bolt-On Touring Accessories that fit YOUR motorcycle!

Bottle Mount Kit

Mounts to any flat sided case



BMT.00.805.10000.B

Instruction Rev: 00

Twisted Throttle LLC
570 Nooseneck Hill Rd
Exeter, RI 02822

Phone: 401.284.4200
Fax: 401.223.6954
www.twistedthrottle.com

PLEASE READ BEFORE INSTALLING

TWISTED THROTTLE products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. TWISTED THROTTLE takes no responsibility for damages caused by improper installation.

Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws, bolts, and nuts.

All screws, bolts, and nuts should be checked after driving the first 30 miles (50 km) to ensure that all are tightened to the proper torque.

All screws, bolts, and nuts, including all replacement hardware provided by TWISTED THROTTLE should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M5.....3.5 ft-lbs (5 Nm)
M6.....6.5 ft-lbs (9 Nm)
M8.....16 ft-lbs (22 Nm)
M10.....32 ft-lbs (43 Nm)
M12.....55 ft-lbs (75 Nm)

Installation Instructions

1

Mounting Bracket



TC.FMT.019.01

Qty.....1

2

Velcro Strap



360mm

Qty.....2

3

Elastic Loop



Qty.....1

4

Lens Head Screw



M6x16.....DIN 7380

Qty.....2

5

Sealing Washer



M6

Qty.....2


6

Lock Nut w/ Flange



M6

Qty.....2

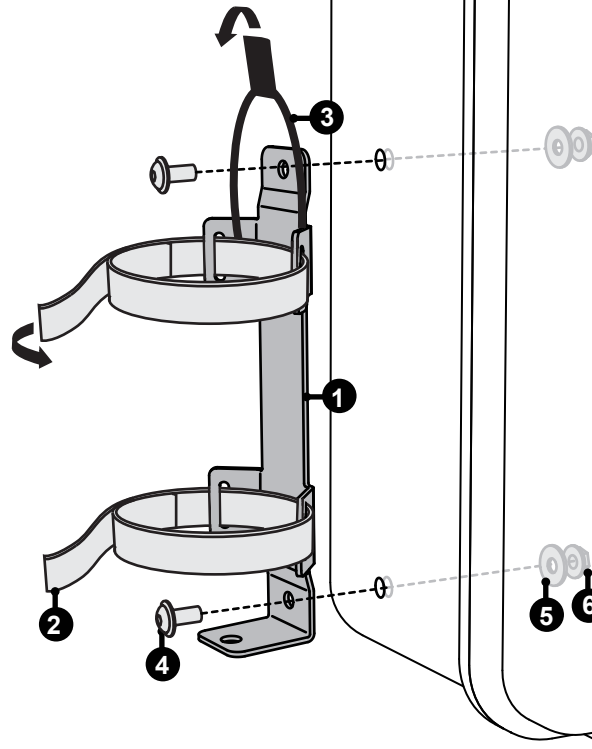

Step One: Mark the hole centers on to the surface the bracket will be mounted to. Using a 6mm or 1/4" bit, drill the two mounting holes.

Step One: Bolt the bracket to the case using the included hardware.